

Introducing the TD4 Series (Narrow Space) Melt Pressure Transducers.

SERIES: TD4




FEATURES

- Fluid filled system
- Standard 3.33mV/V
- 6pin Bayonet Connector
- 10" Exposed Capillary
- 18" Flex
- 0.5% Combined Error (ranges above 1500 psi)
- 80% Output Calibration
- Industry Standard Housing
- 750°F (400°C) Rating
- Ranges from 0-500 to 0-20,000psi
- Standard Diaphragm: INCONEL

TD4 OPTIONS

- OUTPUT OPTIONS
 - 4-20mA
 - 0-10VDC
- CONNECTOR OPTIONS
 - 8pin 6pin-CANNON
- Mercury Free/Oil Fill (660°F)
- No Capillary /Complete Armour

DIMENSIONS

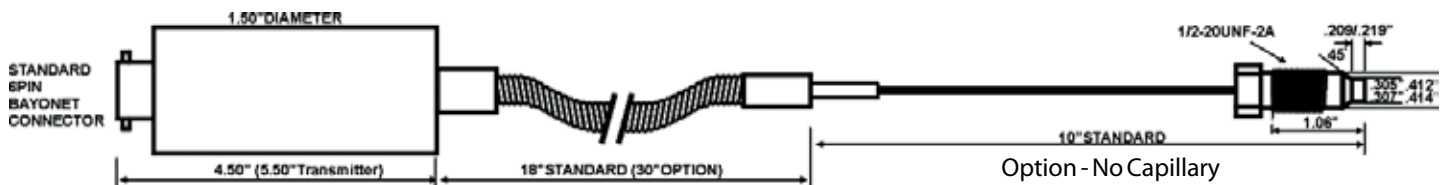



"APPLYING TODAY'S TOOLS WITH YESTERDAY'S EXPERIENCE
PROVIDING OUR CUSTOMERS THE SOLUTIONS OF TOMORROW."

SPECIFICATIONS

Mechanical	
Ranges	0-500, 750, 1000, 1500, 3000, 5000, 7500, 10,000, 15,000, 20,000psi
Max Error	+/- 0.5% (above 1500 psi ranges), +/- 1% (below 1500 psi ranges)
Repeatability	+/- 0.2% Of Full Scale
Overload Capability	2x Full Scale
Mounting Torque	150 Inch-lbs MIN 500 Inch-lbs MAX
Temperature Effects	
Maximum Diaphragm Temp	750° F (400° C) – Mercury Fill 660° F (350° C) – Mercury Free/Oil Fill
Zero Shift Of Diaphragm	15psi / 100° F (38° C) – Mercury Fill 30psi / 100° F (38° C) – Mercury Free/Oil Fill
Maximum Housing Temp	250° F (400° C)
Zero Shift Of Electronics	1% / 100° F (38° C)
Electrical	
Measuring Sensor	Output 3.33 Mv/v (optional 4-20ma and 0-10 vdc)
Supply Voltage	10 vdc for Mv/v and 16-36 vdc for amplified units
Element Resistance	± 1% Of Full Scale
Zero & Span (Transmitter)	± 15%
Internal Shunt Calibration	80% ± 0.2% Of Full Scale
Zero Balance (Transducer)	± 5% Full Scale
Oil Fill Temperature Drift (thermal expansion)	Up to 125 psi @ 250° F (121° C), Up to 250 psi @ 500° F (260° C)

ORDERING

Series	Fill	Output	Pressure	Accuracy	Capillary	Flex	Thread	Connector	Diaphragm	Tip Length
TD4	M	3	1.0	5	6	18	U	6B	N	1
TD4	M= Mercury O= Oil	3= 3.33mV/V 4= 4-20mA 1= 0-10VDC	1.0 M= PSI x1000 1.5 C= PSI x100 3.0 5.0 7.5 10 15 20	2= 0.25% (above 1500psi) 5= 0.5% (above 1500psi) 1= 1% (1500psi and below)	0= 0" 10= 10"	18= 18" 30= 30"	U= 1/2" x 20 M= M18 x 1.5	6B= 6 PIN Bendix 6T= 6 PIN Threaded 8T= 8 PIN Threaded 8C= 8 PIN Threaded (Barber Colman)	N= Inconel	1 = 0.125" tip length 2 = 0.215" tip length

*Contact factory for additional optional/custom modifications.

MECHANICAL INSTALLATION

1. MOUNTING HOLE

All holes must be concentric within 0.002"
AVAILABLE DRILL KITS : Page 4

2. PROTECTIVE CAP

Leave cap on until installation - FRAGILE tip

3. LUBRICATE THREADS with EITHER :


1. NEVERSEEZ by BOSTIK
2. C5A by FELRO
3. MOLYKOTE by DOW CORNING

4. CLEAN HOLE OF ALL PLASTIC MATERIALS

Any residue can damage tip on installation.
AVAILABLE CLEAN KITS : Page 4

5. TRANSDUCER HOUSING (Max Temp - 160°F)

Install in low vibration area.
MOUNTING BRACKET: TDMP-MTG-BRACKET

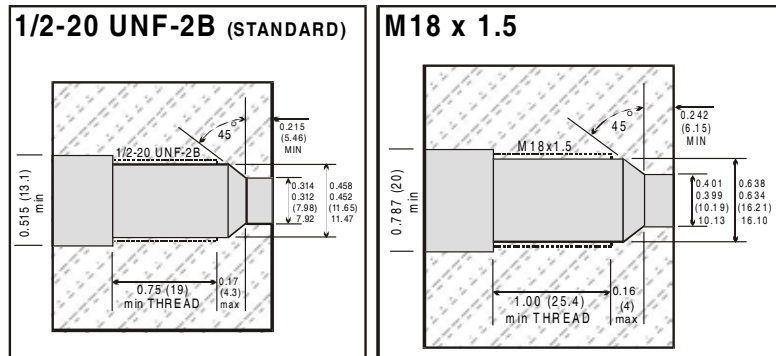

6. MOUNTING TORQUE

MIN 150inch-lbs MAX 500inch-lbs
Install finger tight then turn 1/4 TURN with wrench

ELECTRICAL INSTALLATION

1. WIRING DIAGRAM

Depending on connector below :

2. CABLE+GROUND (26AWG, 6WIRE, SHIELD)

Shield may have to be connected to ground in a high noise environment. Do not connect to meter.

3. ZERO ADJUSTMENT


To compensate for pressure drift caused by temp changes.
At operating temperature with no pressure on transducer, adjust the pressure indicating device to read "0"

4. SPAN ADJUSTMENT

To calibrate readout device to transducer.
Press "CALIBRATE" and adjust reading to read 80% SPAN.


TRANSDUCER - 3.3 or 2.5mV/V

6 PIN BAYONET

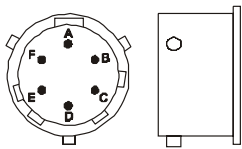


LEAD	COLOR	6 PIN
SIGNAL+	RED	A
SIGNAL-	BLACK	B
EXCITATION+	WHITE	C
EXCITATION-	GREEN	D
CALIBRATION	BLUE	E
CALIBRATION	ORANGE	F

6 PIN SCREW

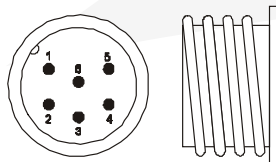


LEAD	COLOR	6 PIN
EXCITATION+	WHITE	1
EXCITATION-	GREEN	2
SIGNAL-	BLACK	3
SIGNAL+	RED	4
NOT USED		5
NOT USED		6

8 PIN SCREW

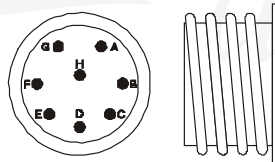

LEAD	COLOR	8 PIN
EXCITATION+	WHITE	A
SIGNAL+	RED	B
EXCITATION-	GREEN	C
SIGNAL-	BLACK	D
CALIBRATION	BLUE	E
CALIBRATION	ORANGE	F
NOT USED		G
NOT USED		H


8 PIN SCREW (Barber Colman)

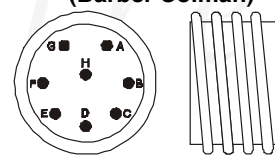

LEAD	COLOR	8 PIN
EXCITATION+	WHITE	A
SIGNAL+	RED	B
SIGNAL-	BLACK	C
EXCITATION-	GREEN	D
CALIBRATION	BLUE	E
CALIBRATION	BROWN	F
NOT USED		G
NOT USED		H

TRANSDUCER - 3.3 or 2.5mV/V

6 PIN BAYONET

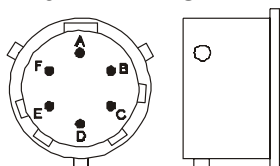

4-20mA OUTPUT

LEAD	COLOR	6 PIN
SUPPLY/SIGNAL+	RED	A
SUPPLY/SIGNAL-	BLACK	B
N/A	WHITE	C
N/A	GREEN	D
CALIBRATION	BLUE	E
CALIBRATION	ORANGE	F

VOLTAGE OUTPUT

0-5, 1-5, 0-10VDC

LEAD	COLOR	6 PIN
SIGNAL+	RED	A
SIGNAL-	BLACK	B
EXCITATION+	WHITE	C
EXCITATION-	GREEN	D
CALIBRATION	BLUE	E
CALIBRATION	ORANGE	F

GENERAL OPERATIONAL GUIDES

1. START UP

Before starting the extruder drive, ensure that the extruder is at operational temperature and plastic at tip is molten. A cold start can literally rip off the fragile diaphragm.

2. REMOVAL

Only remove transducer when barrel is at operational temperature and zero pressure.

Always clean hole of all solids before re-installing.

Check hole dimensions with thread gauge of cleaning kit to ensure proper hole. Hole size at tip can reduce over time.

Always remove transducer before cleaning inside barrel with abrasive cleaner or wire brush.

3. CLEANING TIP

Clean tip lightly with a dry cloth while tip is still hot.

Do not use any sharp tools (screwdriver, chisel, knife, wire brush etc.)

TROUBLESHOOTING

1. Indicator Full Scale

Check Continuity Of Cables

2. Indicator Unstable Reading

Check Continuity Of Cables

3. Indicator Reads Only "0"

Perform Calibration.

If Doesn't Change - Send Instrument In For Analysis

4. Indicates Wrong Pressure

Perform Calibration

If Still Incorrect - Send Transducer In For Analysis

HOLE CLEANING KIT

TDMP-CLEAN-1/2

Kit is used to clean transducer hole before insertion to prevent diaphragm damage.



HOLE CUTTING KIT

T DMP-CUT-1/2

All the Drills, Reamers and Taps required to drill a proper hole for standard transducers (1/2-20UNF).

