


## CirrusSense™ TDWLB Battery Replacement



### DESCRIPTION

When replacing your TDWLB battery, please follow the important procedures listed below:

1. The original sealing gasket may possibly adhere to the transducer housing (dome). This will need to be cleaned and removed from the housing before inserting the new battery. (see below photo)
2. Wait a minimum of 90 seconds before inserting the new battery. The transducer needs to reset before inserting a new battery.

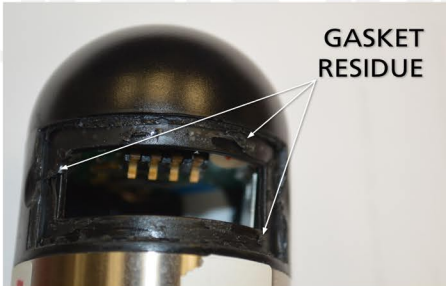

3. Remove paper backing from Gasket before installing battery. Install battery and press firmly all around battery door to insure a good seal.

